

For Larger Penetrations,
use VaproLiqui-Flash
tooled at least 1" onto the face and
2" out along all sides of the penetration


Apply sufficient Dow 758
Sealant to completely
seal fastener penetrations

Apply VaproLiqui-Flash
to complex penetrations
[i.e. structural elements]
tooled evenly at least 1"
onto the face and at
least 2" out along all
sides of the penetration

OK to apply
VaproLiqui-Flash
to damp substrate

Apply and lightly tool Dow 758 Sealant
around smaller penetrations
up to 1" in Diameter

Gasketed Fasteners
Require no additional
Sealing

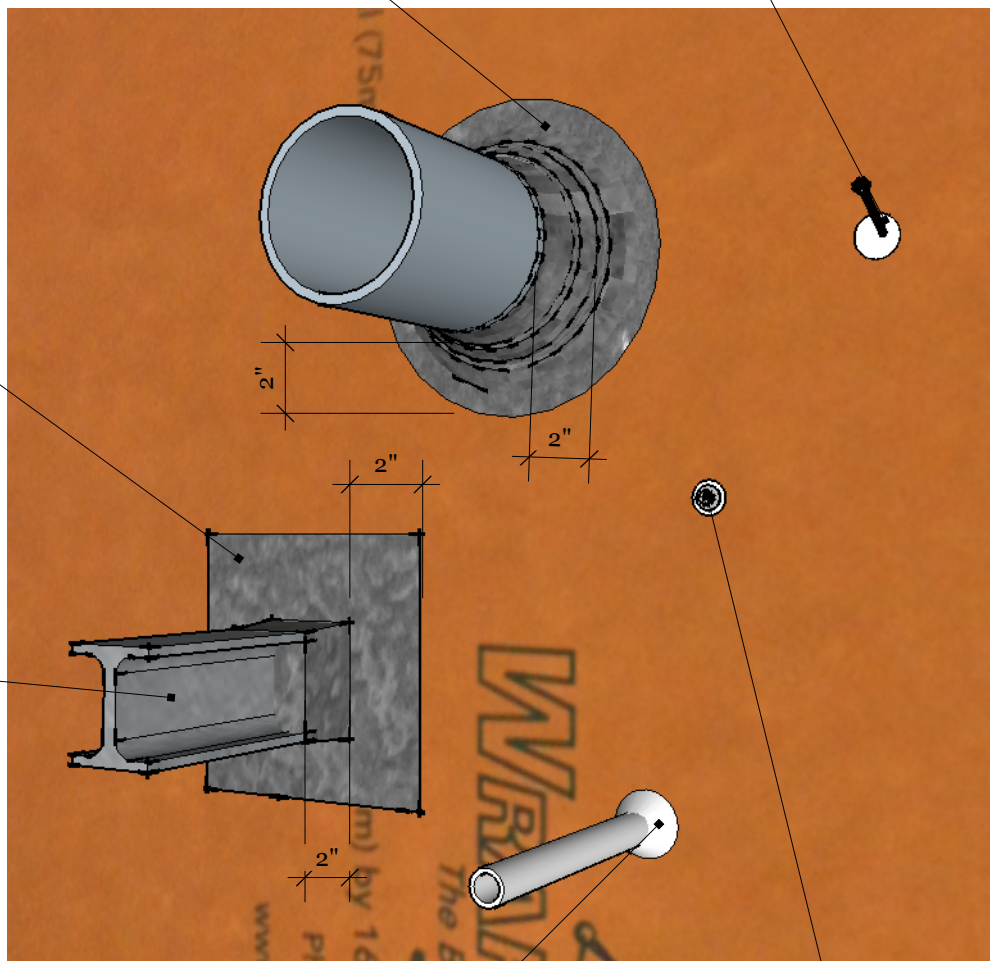

WRAPSHIELD SA®
SELF-ADHERED

A Vapor permeable, weather-resistive, air barrier self-adhered membrane with VaproLiqui-Flash vapor permeable, liquid applied flashing system.

DESCRIPTION:

WrapShield SA with VaproLiqui-Flash and VaproFlashing SA (Self-Adhered) creates a complete air barrier membrane over gypsum or plywood sheathing, concrete, and CMU blocks.

DRAWN BY: AFG DATE: 23.09.2012

Always check www.vaproshield.com for the latest details and installation instructions